



- START CIRCUITS - 2 ga.
- INVERTER SUPPLY - 2/0 ga., 300a. FUSE
- SHIP'S SERVICE SUPPLY - 2/0 ga.
- HALYARD WINCH - 4 ga., 70a. BREAKER
- SHEET WINCH - 4 ga., 70a. BREAKER
- WINDLASS - 4 ga., 80a. BREAKER
- BATT. COMBINER CIRCUITS - 4 ga.
- PANEL SUPPLY - 4 ga.
- SOLAR PANEL FEED - 10 ga.
- VOLTMETER SENSE - 14 ga.
- NEGATIVE CABLES - ga. AS ABOVE
- MAST CIRCUIT NEG. CABLE, 8ga. (310)

# ANTARES 44 ELECTRICAL 12V. SUPPLY DISTRIBUTION EL-04-03

REV. I, MAY 13, 2009  
FIRST VESSEL USED 4431

T.C.